

## 15kV HIGH VOLTAGE INSULATION TESTER



- Test insulation resistance up to 30TΩ (30000GΩ).
- Short-circuit current up to 5mA
- Microprocessor controlled.
- 30 insulation test voltages :
 


500V,	1kV,	1.5kV,	2kV,	2.5kV,	3kV,
3.5kV,	4kV,	4.5kV,	5kV,	5.5kV,	6kV,
6.5kV,	7kV,	7.5kV,	8kV,	8.5kV,	9kV,
9.5kV,	10kV,	10.5kV,	11kV,	11.5kV,	12kV,
12.5kV,	13kV,	13.5kV,	14kV,	14.5kV,	15kV
- AC/DC voltmeter (600V).
- PI (Polarization Index) indication.
- DAR (Dielectric Absorption ratio) indication.
- Auto-ranging on all insulation ranges.
- Backlight function.
- Bargraph indicates test voltage, rise and decay can be observed.
- Menu driven.
- Visual and audible warning if external voltage is present. ( $\geq 30V_{ac}$  or  $\geq 30V_{dc}$ )
- Auto-hold function to freeze the reading.
- Overload protection.
- Adjustment for testing time (duration) : 1~30 minutes
- Auto-off.
- Calendar.
- Optical USB to RS-232 data transmission.
- 200 measurement results can be saved in the memory and recalled on the display.
- Safety standard : EN 61010-1 CAT IV 600V  
EN 61010-2-030  
EN 61326-1

- Insulation test voltage up to 15kV.
- Test Insulation Resistance up to 30 TΩ (30000GΩ).
- Short circuit current up to 5mA.

## APPLICATIONS

For testing the insulation resistance of cables, motors, generators, transformers, insulators, high-pressure switches, wiring installations.....etc.


## Instrument Layout

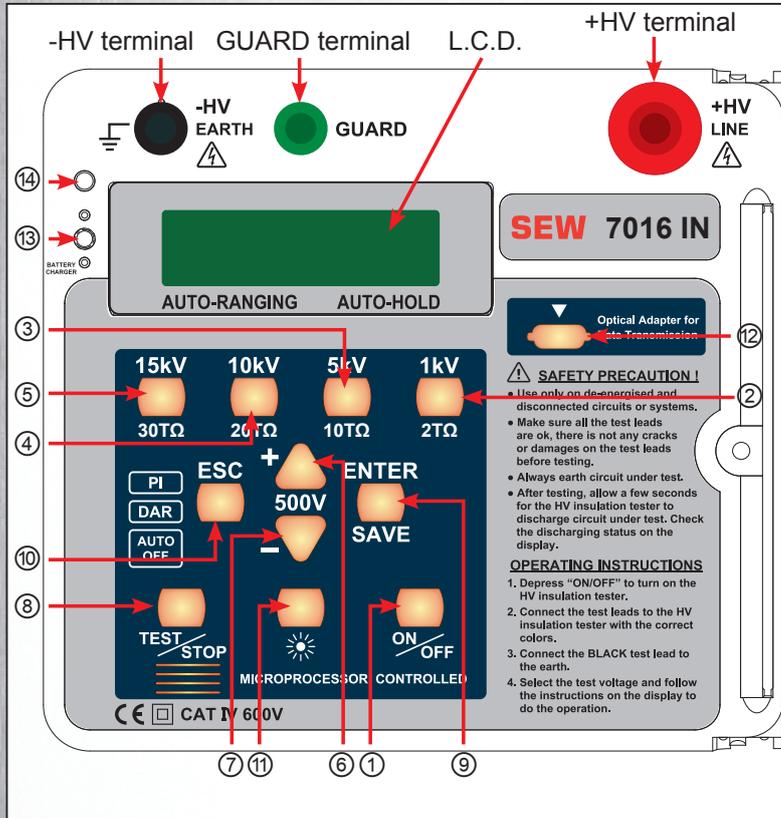

- |  |   |
|--|---|
| ① Power ON/OFF button                                | ⑦ To subtract (-500V) button to the selected test voltage |
| ② Insulation resistance test at 1kV button           | ⑧ TEST/STOP button  |
| ③ Insulation resistance test at 5kV button           | ⑨ ENTER & SAVE button                                     |
| ④ Insulation resistance test at 10kV button          | ⑩ ESC button  |
| ⑤ Insulation resistance test at 15kV button          | ⑪ BACKLIT button  |
| ⑥ To add (+500V) button to the selected test voltage | ⑫ CA-232 connection socket                                |
|  | ⑬ Battery-charge socket                                   |
|  | ⑭ Charge indicator  |

## Display

2 Lines x 16 characters, large intelligent LCD module.

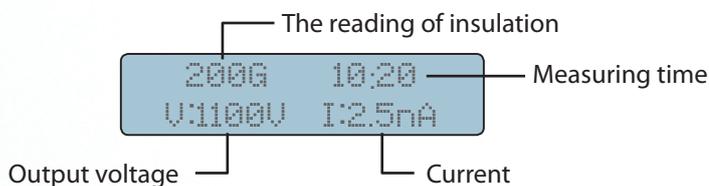

## SPECIAL FUNCTIONS

### Voltmeter

When testing insulation resistance while there is a presence of voltage (whether ACV or DCV) on the measured object, conventional insulation testers are highly susceptible to damage. With this new line of insulation testers, it has the ability to switch to voltage detection mode without damaging the instrument once it detects the presence of voltage. It will also display the voltage finding on the LCD screen. With this new and unique function, it will allow the user to safely rule out the possibility of any presence of voltage on the measured object prior to measuring its insulation.

### DAR = Dielectric Absorption Ratio

The dielectric absorption ratio is the ratio of the insulation resistance measured at 1 min divided per the insulation resistance measured at 30 seconds. 30 seconds after starting a test, the tester will beep, indicating the operator that the resistance value measured at 30 seconds now has been saved internally. 1 minute after starting a test, the tester will beep again, indicating the user that the DAR result is now computed, and change the display format to now display the DAR result.

$$\text{DAR} : \frac{1\text{-min insulation resistance}}{30\text{-sec insulation resistance}}$$

### PI = Polarization Index

The polarization index or PI is the ratio of the insulation resistance measured at 10 minutes divided per the insulation resistance measured at 1 minute.

10 minutes after starting a test, the tester will beep again, indicating the user that the PI result is now computed, and change the display format to now display the PI result.

$$\text{PI} : \frac{10\text{-min insulation resistance}}{1\text{-min insulation resistance}}$$


Lower insulation resistance tested takes longer test time, which would deteriorate the specimen. Thus, higher DAR or PI (as close to 1) would create better insulation grade of specimen.

## SPECIFICATIONS


Test voltage	From 500Vdc to 15kVdc Adjustable in 500V steps	
Preset buttons	1kV, 5kV, 10kV, 15kV	
Insulation resistance	1000GΩ/0.5kV 1000GΩ at 0.5kV ~ 30TΩ at 15kV	
Accuracy	1kV: 0~200GΩ 5kV: 0~1TΩ 10kV: 0~2TΩ 15kV: 0~3TΩ	±(5%rdg+5dgt)
	1kV: 200GΩ~2TΩ 5kV: 1TΩ~10TΩ 10kV: 2TΩ~20TΩ 15kV: 3TΩ~30TΩ	±20%
Resolution	1GΩ : 0.001GΩ 10GΩ : 0.01GΩ 100GΩ : 0.1GΩ 1000GΩ : 1GΩ 10TΩ : 10GΩ 30TΩ : 100GΩ	
Short circuit current	up to 5mA	
PI (Polarization Index)	√	
DAR (Dielectric Absorption Ratio)	√	
Voltmeter	ACV : 30~600V (50/60Hz) DCV : 30~600V Accuracy : ±(2.0%rdg+3dgt) Resolution : 1V	
Current measurement	0.5nA ~ 0.55mA (Depending on the insulation resistance)	
Power source	Rechargeable battery	
Adapter	Input : 100-240Vac, 0.4A, 50-60Hz Output : 24Vdc, 0.62A	
Dimensions	430(L) x 324(W) x 127(D)mm	
Weight	Approx : 6.56kg	
Accessories	Instruction manual Test leads (AL-58, AL-30AG, AL-30HB) Data transmission cable CA-232 Compact disk (CD) for PC interface Alligator clip (AL-23CA) Charger (CHA-7015) Test report	

## Data Communication Function


- Downloading saved data to a PC.
- Transferring and showing real-time data to a PC.
- 200 measurement results can be saved in the memory and recalled on the display.

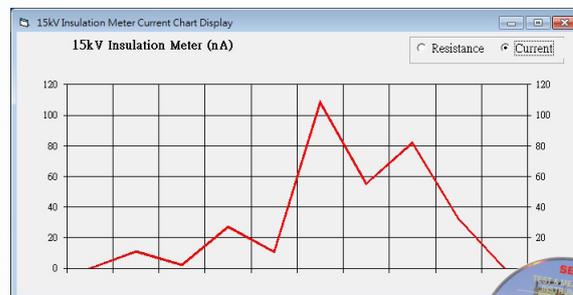

## Measure the insulation of cable

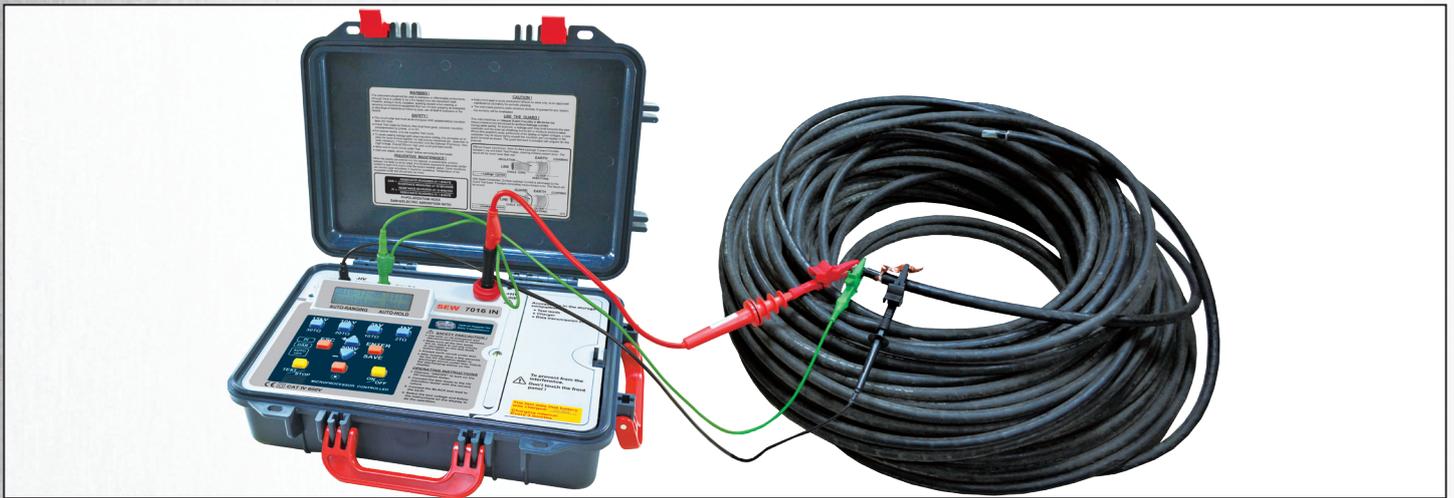

Without Guard Connection, Error Surface Leakage Current Circulate between Line and Earth Test Probes, creating a measurement error. The result will be much lower than real.

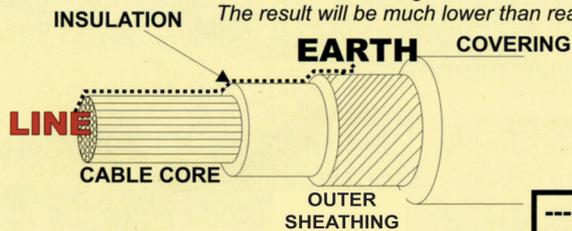

With Guard Connected, Surface Leakage Current is eliminated by the Guard Test Lead. Therefore eliminating measurement error. The result will be correct.



--- = Leakage Current

## Accessories



A complete set of accessories : H.V test leads (AL-30AG AL-30HB), Alligator clip (AL-23CA). H.V Line probe with (AL-58), Data transmission cable (CA-232), Charger (CHA-7015), Compact disk(CD), Instruction manual, Test report.